

Digital Fotofob

QUICK GUIDE

12 Simple Steps to Setup your Digital Fotofob in 10 minutes

Step 1: Unpack the Digital Fotofob and use the small screwdriver provided to open the battery door. Install the batteries following the detailed instructions in the main Operation Manual (*enclosed*). Replace the battery door and press and hold the **'Mode'** key for 3 seconds to turn on the Digital Fotofob. The Digital Fotofob will display the clock. The default is '00:00:00 2006/01/01 Sunday'. The clock time will automatically be synchronized to your computer clock upon USB connection.

Step 2: Press **'Mode'** key again to get to Main Menu in which four modes of operation (*Power Off, Clock/Calendar, Setup, Exit*) are ready for your selection. Use **'◀'** and **'▶'** keys to move cursor to Setup and press **'Mode'** key to confirm selection.

Step 3: When entering Setup mode, you will see the Auto Slide Interval selection with default at 5 seconds. Use **'◀'** and **'▶'** keys to adjust the value to your preference (*between Disable and 1 to 31 seconds*) and push **'Mode'** key to confirm as well as to leave this selection. You will then see the Auto Off Timer screen. Auto Off Timer setting default is 5 minutes. Use **'◀'** and **'▶'** keys to adjust the value to your preference (*between Disable and 1 to 31 minutes*) and push **'Mode'** key to confirm as well as to leave this selection. Auto Off Timer value sets the countdown time for the Digital Fotofob to automatically switch itself off from the last key input.

Step 4: Turn on your PC/Macintosh (*Mac*) and use the USB cable (*provided*) to connect the Digital Fotofob to a USB socket on your PC/Mac. Please note that the Digital Fotofob supports Windows Operation System (*OS*) versions 2000/XP/Vista and is not compatible with Windows OS version 98/ME or earlier versions. For Mac OS, the Digital Fotofob supports OS versions 10.3.9, 10.4, 10.5 and 10.5.2.

Step 5: When using a PC, the Application Program (*AP*) will launch automatically and the AutoRun AP Dialogue Box will appear on your desktop. For Mac, the Digital Photo Viewer icon will appear on your desktop, double click this icon to launch the first Digital Viewer Dialogue Box. In the first Digital Viewer Dialogue Box, double click the icon to launch the second dialogue box. Double click again on the icon of the second dialogue box will bring you to the AP Dialogue Box. The basic contents of the PC/Mac APs are very much similar and are described below. Please ensure the USB cable is firmly inserted into the Digital Fotofob and your PC/Mac USB socket. In case that the AutoRun AP does not pop up in your PC (*or the Digital Photo Viewer icon does not pop up on your Mac*), unplug the USB, check and confirm the PC/Mac OS is responding and insert again.

Step 6: To add photos to your Digital Fotofob, click the **'Add Photo'** key on the AP Dialogue Box. An **'Open'** dialogue box will then be launched with which browsing and selecting

target pictures from your PC/Mac directories can be conducted with normal operation practices. The Digital Fotofob supports common picture formats of .jpg and .bmp files.

Step 7: After you select the pictures and close the **'Open'** dialogue box, picture icons of your selection will appear in the AP Dialogue Box. Make sure that you check all the squares under **'Slide Show'** with **'✓'** to include pictures in your slide show list. System default is to **'✓'** all pictures. Please note that slide show will stop and not show subsequent pictures if one (*or more*) of the pictures are not checked **'✓'** in the list. Pressing the **'▶'** key on the Digital Fotofob will resume slide show from the next picture.

Step 8: To upload pictures to your Digital Fotofob, click **'Upload to Device'** key in the AP Dialogue Box. Depending on the number of pictures selected, it may take some time for the Digital Fotofob to be loaded. 100 pictures would normally take around 3 minutes to upload.

Step 9: Upon upload completion, you may leave the AP Dialogue Box by clicking the **'Exit'** key. Choose **'yes'** when the **'Remove Device'** dialogue box pops up in your PC desktop and the Digital Fotofob can be safely unplugged from the PC.

Step 10: For Mac OS, choose the appropriate options from Cancel/No/Yes to update the Digital Fotofob with changes made after clicking the **'Exit'** key from the AP Dialogue Box. Before unplugging from Mac, close all dialogue boxes launched on your way to open the AP Dialogue Box (*two of them*) and finally double click the Digital Photo Viewer icon and choose **'Eject "Digital Photo Viewer"'** option from the pull down menu to safely eject the Digital Fotofob from your Mac.

Step 11: It is important and thus highly recommended that the above procedures are followed every time before unplugging the Digital Fotofob from PC/Mac to ensure data integrity.

Step 12: To initiate Slide Show on your Digital Fotofob when it is showing the clock display, press **'Mode'** key to get to the main menu. Choose **'Exit'** to enter Slide Show mode.

To fully understand the features and operation of your Digital Fotofob, please read the complete Operating Instructions inside. **Note: the most current/revised version of the Digital Fotofob Instruction Manual is available at www.digitalfotofob.com; it is a .pdf file and may be downloaded and printed.**



Specifications

- 1.44" LCD 128 x 128 pixels, 65k color display
- Stores up to 100 pictures
- Support .jpg and .bmp formats
- USB interface
- Clock/Calendar auto synchronize with computer via USB connections
- **Battery life:** up to 1.5 hours of continuous slide show battery (*actual usage time may be shorter or longer depending on the settings of LCD brightness level and auto off mode*)
- Operating temperature: 0 to 40 degrees C (*32 to 104 degrees F*)

Minimum System Requirements


- PC computers: Windows 2000/XP/Vista
- Macintosh computers: Mac 10.3.9, 10.4, 10.5 and 10.5.2
- 125 MB free hard disk space
- 32 MB RAM
- USB interface
- Color Monitor

Accessories Included

- USB Cable
- Screwdriver

Default Settings in the Digital Fotofob


- Auto Off Timer : 5 minutes (figure 1)
- Brightness Level : 4 (figure 2)
- Slide Show Interval: 5 seconds (figure 3)

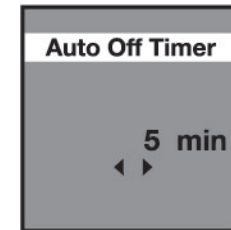

(Fig.1)



(Fig.2)

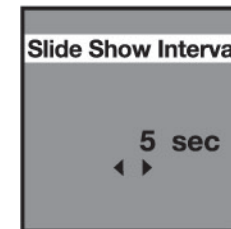

(Fig.3)

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and touch to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment general, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with Class B FCC limits.

This Class B digital apparatus complies with Canadian ICES-003

IMPORTANT!!!

Read the instruction manual before use.

DO NOT expose the product to extreme temperatures, water, rain or snow as it is not a weatherproof product.

DO NOT leave this product inside your car under extreme weather conditions.

Temperatures under 0°C (32°F) will affect the battery performance to power the unit. Please check the operating temperature range of batteries used.

DO NOT try to examine or repair the unit by yourself.

Clean the unit with dry cloth only. **DO NOT** clean with any corrosive substance.

BATTERY CAUTION Immediately dispose of used batteries safely. Keep batteries and screw driver away from children. Battery and screw driver are small objects and could be ingested. If swallowed, contact a physician at once. Do not open battery, dispose of in fire, or attempt to recharge. Dispose of battery according to local regulations. Do not dispose as household waste.

Help/Product Support:

If you have any further problems with your Digital Fotofob, please visit our website at www.digitalfotofob.com